



INSTALLATION MANUAL

FCi Splenda LED Automatic Faucet

Installation, operation and maintenance

SKU	splenda-led-auto
Standard power	6 V CR-P2 / DL223 lithium battery
Optional power	6 V plug-in or dual power
Sensor range	18-22 cm
Finish shown	Chrome



This manual applies to SKU splenda-led-auto.

READ FIRST

Safety and contents

Keep this manual available for installation, operation and future service.

- Read all instructions before installation and retain this manual for operation and service.
- Observe all local building and plumbing codes.
- Flush all water lines before connecting the faucet.
- Install the faucet only in a non-freezing location and never use steam as the hot-water supply.
- Protect the sensor surface from scratches and keep infrared or inverter devices away from the faucet.
- Use only the supplied FCI low-voltage power components; do not perform field wiring from this manual.

Contents

01	Features and specifications
02	Before installation and tools
03	Mounting and water connection
04	Power and commissioning
05	Operation and programming
06	Battery indicator and replacement
07	Troubleshooting and care
08	Warranty and support

PRODUCT OVERVIEW

Features and specifications

Touchless operation with programmable sensing, flow duration and user-selectable LED modes.



FEATURES

- Hands-free sensor operation.
- Programmable sensor range, flow duration, LED mode and temporary-off mode.
- Integrated lever for hot and cold water temperature adjustment.
- Battery, plug-in and dual-power configurations are available.

Specifications

SPECIFICATION	VALUE
Battery	6 V lithium CR-P2 / DL223
Flow volume	2-6 L/min operating range; 3.8 L/min nominal
Maximum water temperature	80 °C
Water pressure	0.3-10 bar
Sensor range	18-22 cm
Flow duration	0.5-4 seconds
Dimensions	175 mm H x 55 mm W x 155 mm D
Available finishes	Chrome, black, white, red, blue and gold

Battery-life guidance

Expected battery life is approximately three years at 50 activations per day. Actual life varies with use, settings, water conditions and battery quality.

PREPARATION

Before installation

Confirm the site, supply conditions and required tools before mounting the faucet.

Tools

- | | |
|---|----------------------|
| 1 | Adjustable wrench |
| 2 | Power drill |
| 3 | Phillips screwdriver |

SUPPLY CONDITIONS

- Confirm the water supply is within the faucet's 0.3-10 bar operating range.
- Use water below the specified 80 °C maximum temperature.
- Flush all water lines before installation.
- Never use steam as the hot-water supply.

SITE PREPARATION

- Confirm the faucet, flexible hoses and drain components fit the selected basin.
- Protect the sensor face and electronic components during installation.
- Keep nearby inverter and infrared-sensor devices away from the faucet.
- Provide an accessible, dry location below the basin for the selected power components.

Hot and cold connection

Connect the hot and cold flexible hoses to the corresponding supply valves and verify the temperature lever moves freely.

Supply hoses and optional power components must match the purchased configuration.

MOUNTING AND WATER CONNECTION

Install the faucet

Mount the body, connect the water and drain hardware, then prepare the electronic controls.

- | | |
|---|---|
| 1 | Position the faucet in the basin opening with the sensor facing the user. |
| 2 | Secure the faucet and route the flexible hoses and drain linkage below the basin without kinks. |
| 3 | Connect the cold and hot hoses to their corresponding supply valves. |
| 4 | Connect the drain linkage if supplied and confirm it moves freely. |
| 5 | Open the water supply valves evenly and inspect every connection for leaks. |

Dimensions

Height	175 mm
Width	55 mm
Depth	155 mm

**NEXT: CONNECT
POWER**

Install the purchased low-voltage power configuration and commission the sensor.

POWER AND COMMISSIONING

Connect power and start the faucet

Use only the battery, plug-in or dual-power components supplied for this faucet.

- 1 Secure the supplied battery and power modules in a dry, accessible location below the basin.
- 2 For battery operation, connect the faucet lead to the battery-box lead.
- 3 For plug-in operation, connect the labelled faucet and adapter leads to the supplied low-voltage electronic box, then plug in the adapter.
- 4 Press the setting button once.
- 5 Place your hands in the sensing area and verify that water and the LED respond correctly.

STANDARD POWER

6 V lithium battery

Use one CR-P2 / DL223 battery of the specified type.

OPTIONAL POWER

6 V plug-in or dual power

Use only the FCI-supplied adapter and low-voltage module.

Power interruption

If the faucet does not restart after power is restored, disconnect the power lead, reconnect it and press the setting button once.

OPERATION AND PROGRAMMING

Operate and program the faucet

Use the setting button to adjust sensing, flow duration, LED behaviour and temporary-off mode.

NORMAL OPERATION

Hands-free water control

Place your hands in the sensing area to start flow. Water and the standard-mode LED stop when your hands are removed.

Use the side lever to adjust hot and cold water temperature.

Adjust the sensor range

First place the faucet in continuous-off mode, then select the desired range using the LED blink sequence.

- 1 Hold the setting button and release it after the LED blinks twice.
- 2 Press the button again until the LED starts blinking; one blink selects the longest range and five blinks selects the shortest range.
- 3 Release the button at the desired setting. Two LED blinks confirm the new range.

Set the flow duration

Flow duration can be set from 0.5 to 4 seconds.

- 1 Hold the setting button until the LED blinks four times, then release it.
- 2 Press and hold the button again for 1-5 seconds to choose the duration.
- 3 Two LED blinks confirm the setting.

Select the LED mode

Open the control cap and use the black LED-setting button.

- 1 Press once to keep the LED off.
- 2 Press again to keep the LED on continuously.
- 3 Press again to keep the LED on during flow and for 10 seconds after flow stops.
- 4 Press again to return to standard mode, in which the LED is on only while water flows.

Turn the faucet off and on

Use continuous-off mode for cleaning or temporary service.

- 1 Hold the setting button until the LED blinks five times, then release it.
- 2 Three immediate LED blinks confirm that the faucet is off.
- 3 Press the button once to return the faucet to normal operation.

BATTERY SERVICE

Battery indicator and replacement

Replace the battery when the status light accelerates or the faucet shuts down.

LOW BATTERY**Status-light sequence**

The LED first blinks every four seconds, then accelerates to approximately 2.5 blinks per second. The faucet eventually turns off while the LED continues blinking.

Use one new 6 V lithium CR-P2 / DL223 battery.

Replace the battery

Wait at least one minute after removing the old battery before installing the replacement.

- | | |
|---|---|
| 1 | Turn off the water supply and disconnect the battery lead. |
| 2 | Remove the old battery and wait at least one minute. |
| 3 | Install one new 6 V CR-P2 / DL223 lithium battery and reconnect the battery lead. |
| 4 | Press the setting button once and verify normal operation. |

SERVICE GUIDANCE

Troubleshooting and care

Use these checks before contacting FCI for product assistance.

SYMPTOM	ACTION
The low-battery LED sequence appears.	Replace the battery with one new 6 V lithium CR-P2 / DL223 battery.
The faucet does not restart after a power interruption.	Disconnect the power lead, reconnect it, then press the setting button once.
Water does not start or runs continuously after a battery change.	Disconnect the battery for one minute, reconnect it, then press the setting button once.
The faucet still does not operate normally after reset.	Close the water supply valves and contact FCI with the SKU and purchase information.
The sensor range, flow duration or LED mode is unsuitable.	Repeat the applicable programming procedure in this manual.

Care and cleaning

Use a soft, damp cloth and mild soap if required, then wipe dry. Do not use abrasive or chemical cleaners. Protect the faucet from cleaner splashes and do not scratch the sensor surface.

WARRANTY

Your selected warranty term

Your warranty term is the option selected at purchase. A one-year warranty is included, and optional two-year and three-year plans are available. Keep your proof of purchase and contact FCI for current terms and claim assistance.

WEBSITE	www.faucetscanadainc.com
PHONE	1-866-279-8369
EMAIL	sales@faucetscanadainc.com

About FCI Faucets Canada Inc.

FCi provides touchless fixtures designed to support reliable sanitation. Our team supports commercial and institutional projects with product selection, documentation and practical guidance.

Thank you for choosing FCI.